



安装指导手册

单相 低压 离网逆变器 -Isuna 3000SO-6000SO

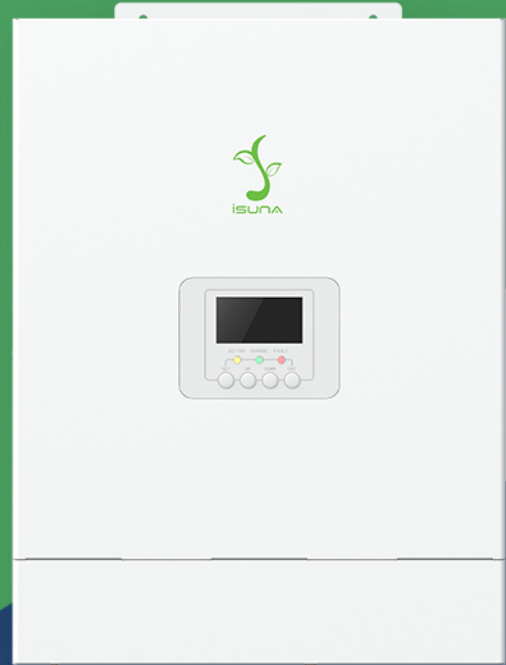


本指南仅适用于安装过程的指导说明
请在安装前仔细阅读用户手册


安装工具

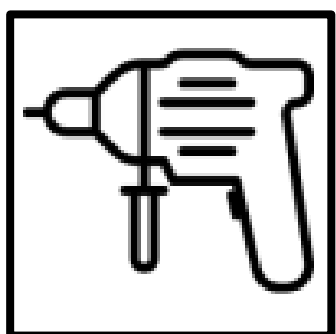


冲击钻：墙面打孔

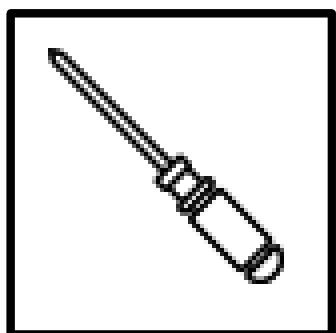


M6十字螺丝刀：拆卸、安装螺丝和接线

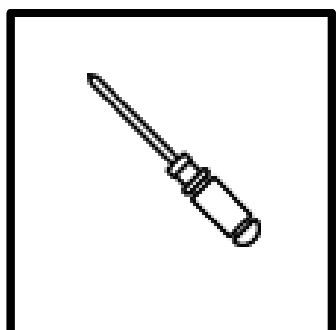


M4十字螺丝刀：拆卸、安装负载端子螺丝

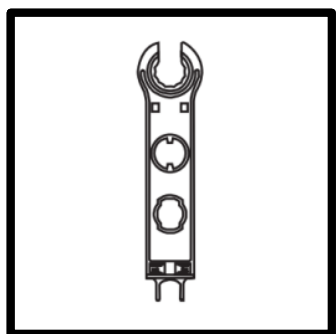


拆卸工具：拆卸PV、BAT线端端子

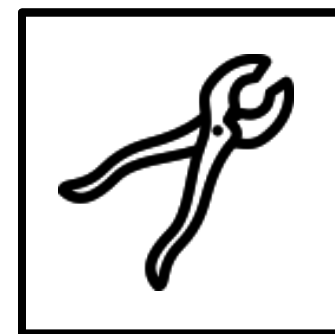


剥线钳：剥线

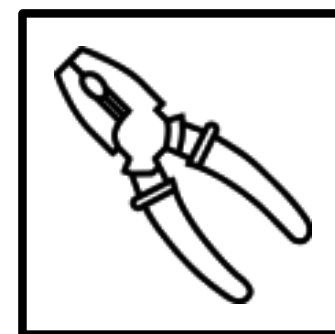

压线钳：压接PV、BAT电缆线

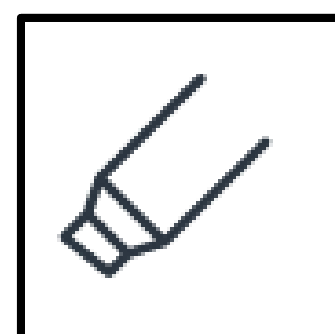


记号笔：打孔记号

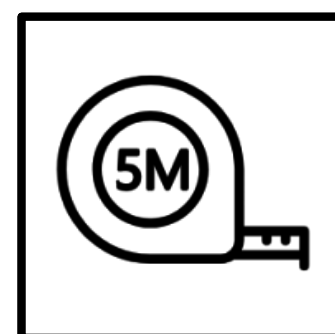

卷尺：测量距离




Installation of wall mounts and inverters


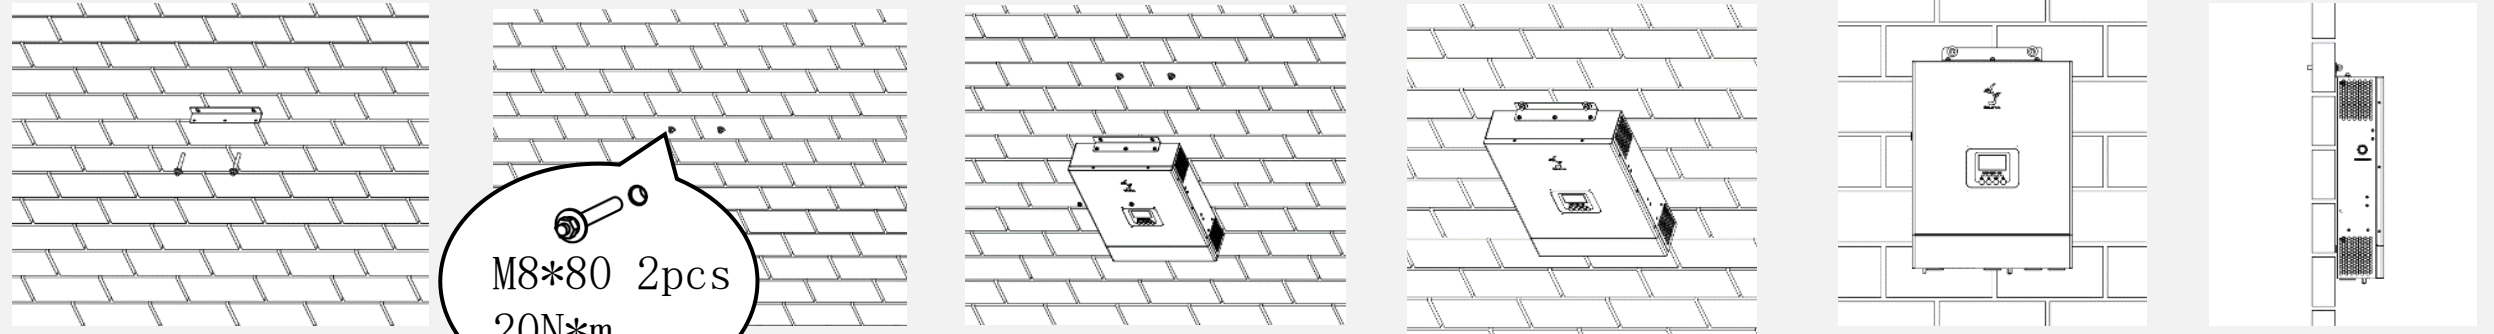


M8*80 2pcs
20N*m

Electrical Connection Diagram

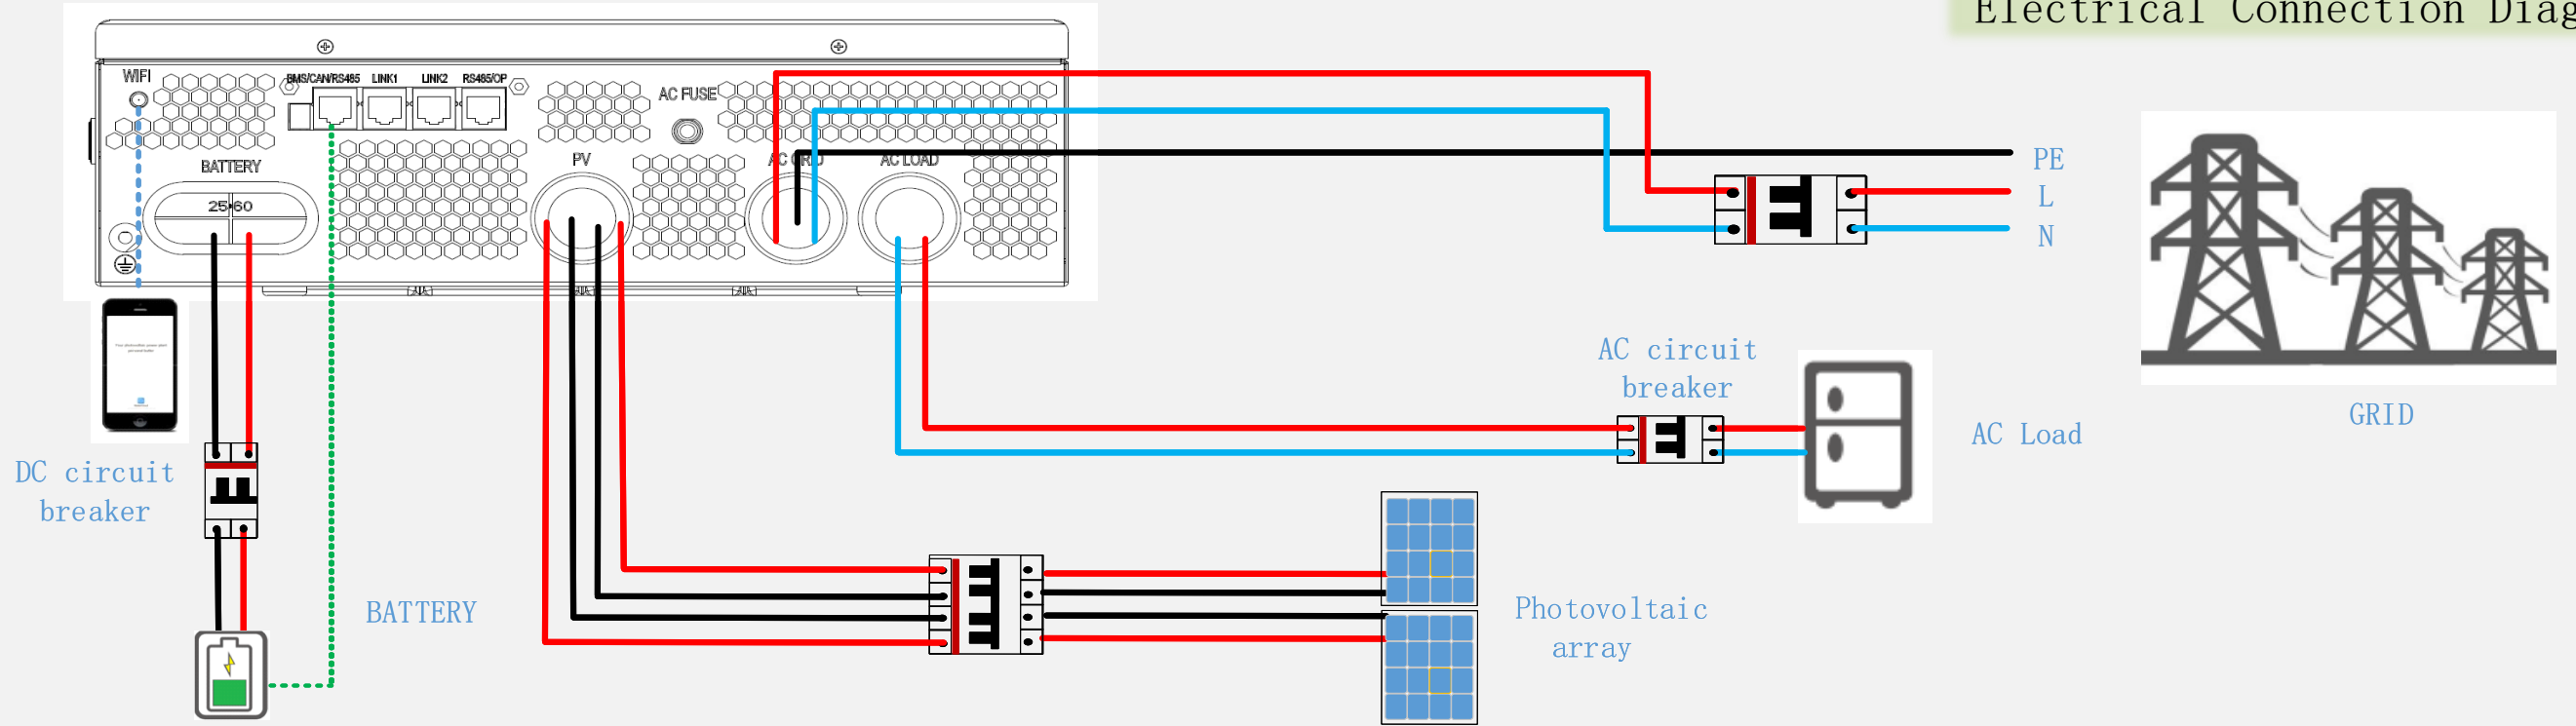



Inverter grounding

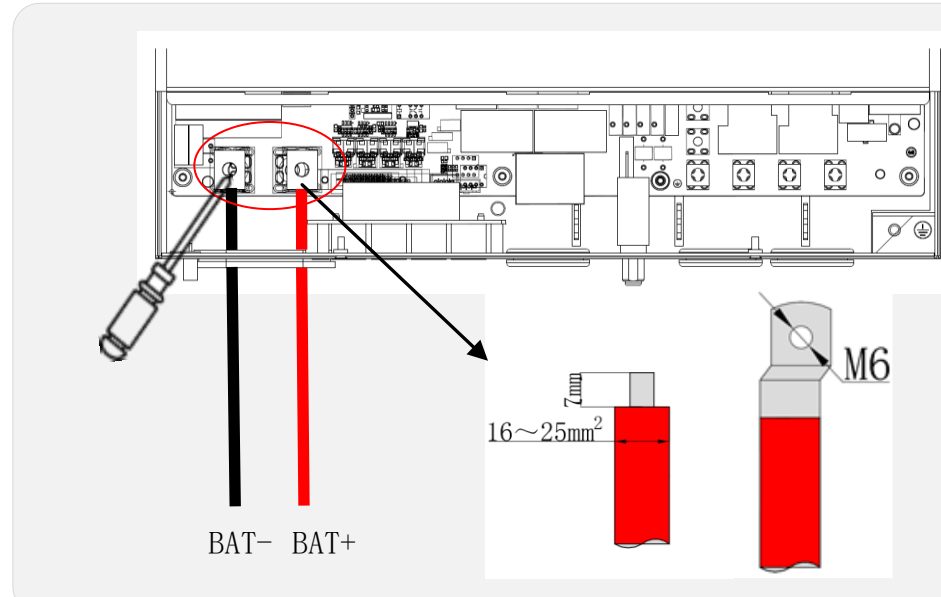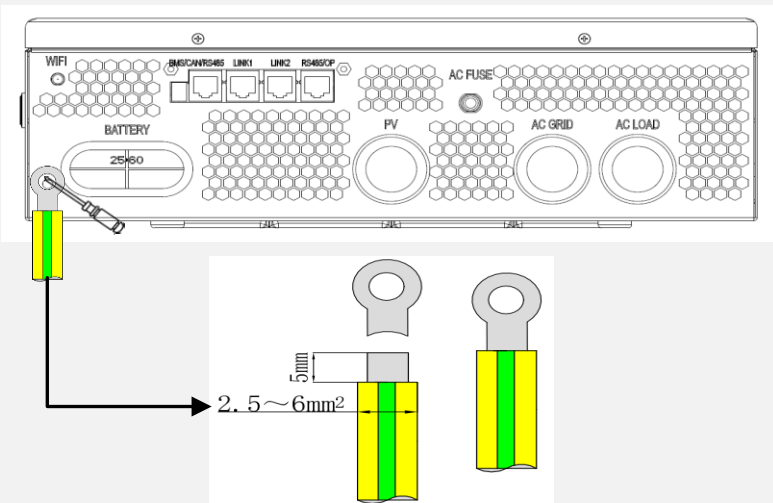


Connecting the battery

Avoid incorrect connection between positive and negative!!!


Connecting PV

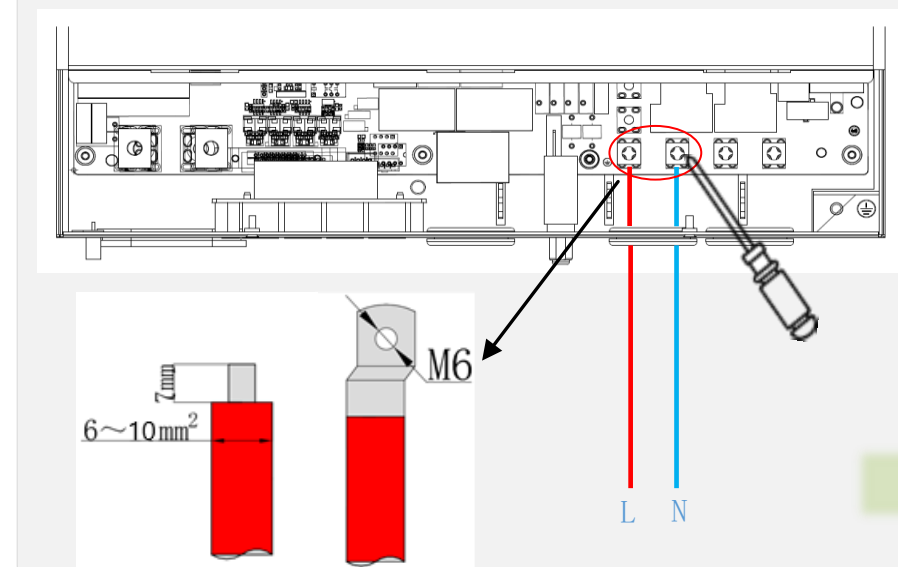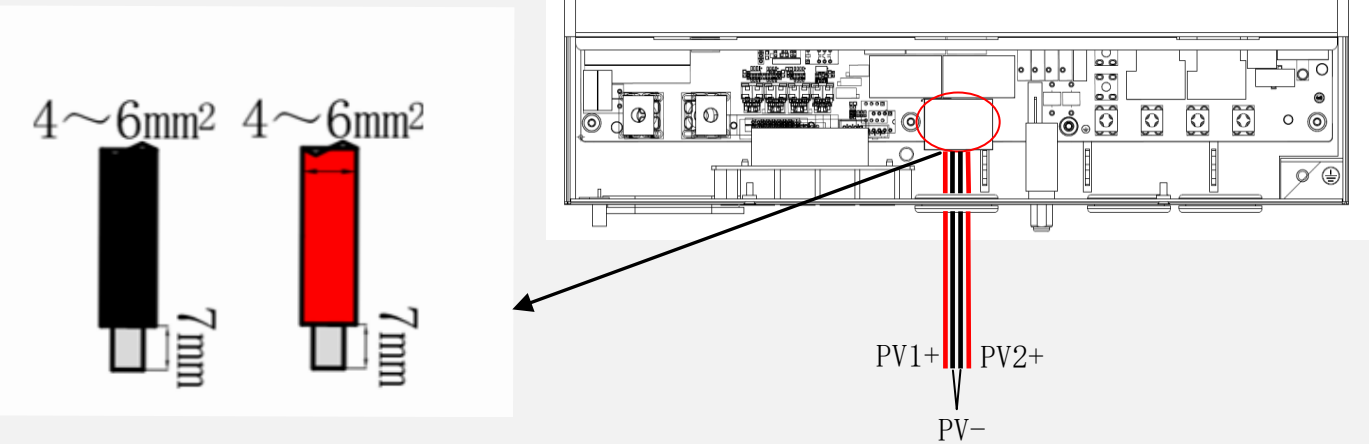

Connecting the GRID

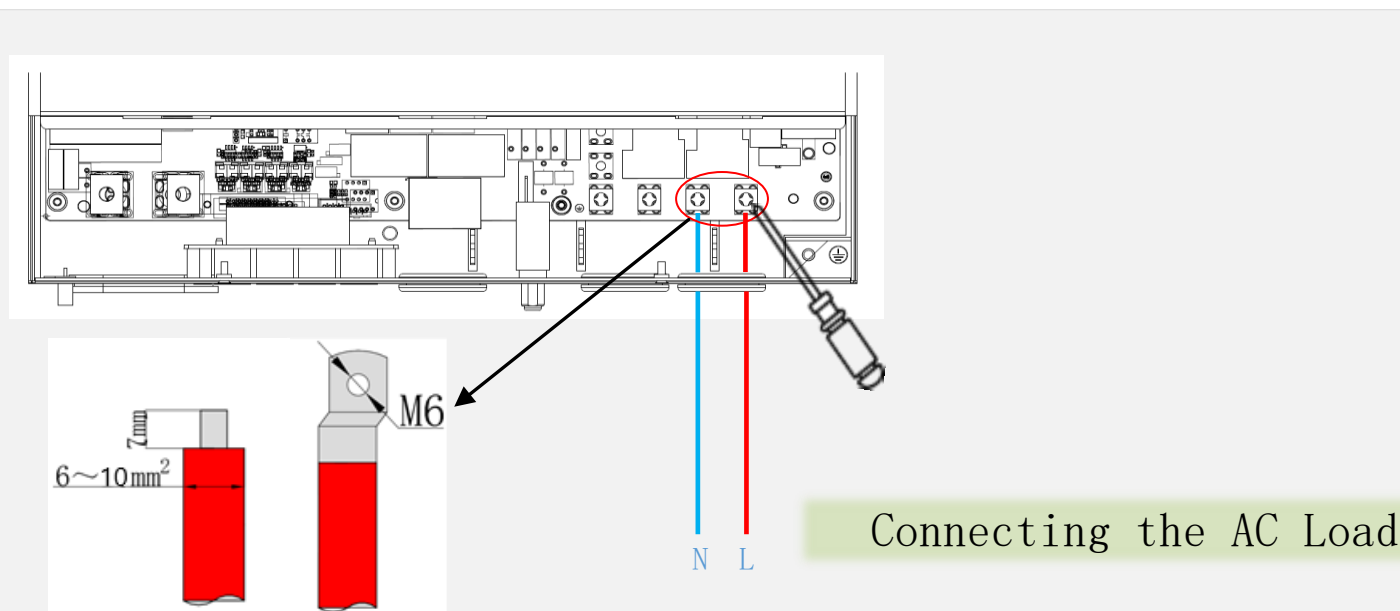

Connecting the AC Load

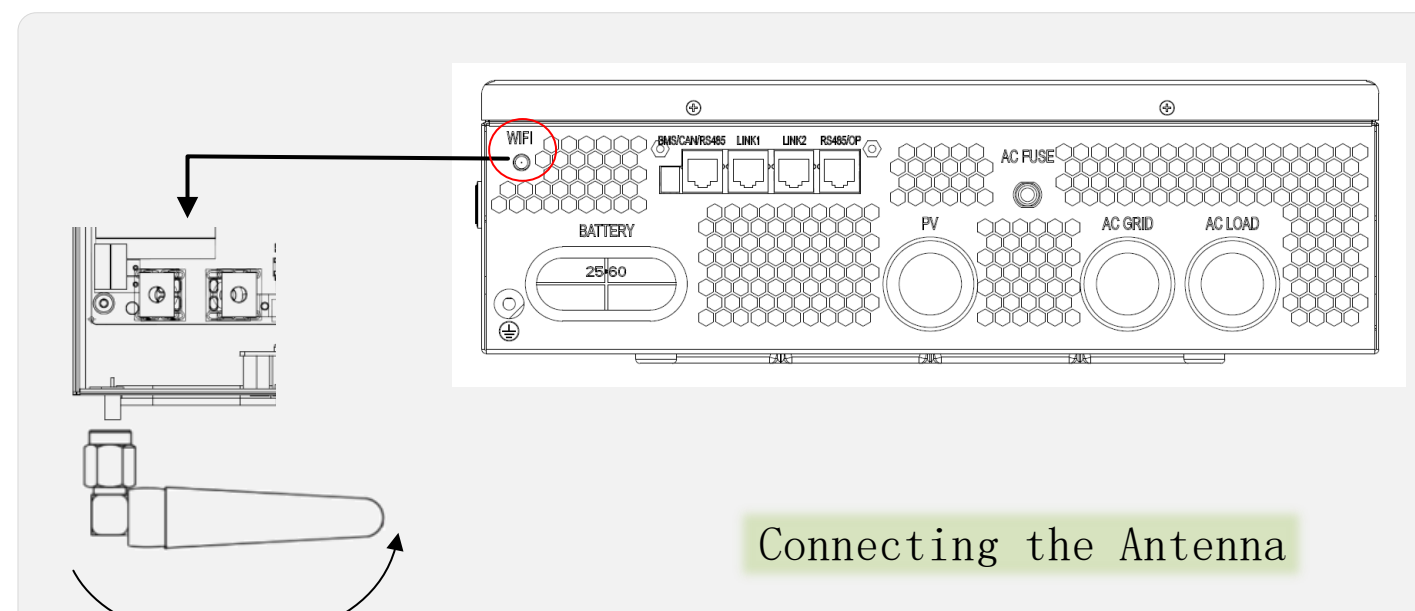

Connecting the Antenna

ESS Link Download



Android



Google play



iOS

Download the user manual for details:
www.sinexcel-isuna.com/Download/