

安装指导手册


单相低压混合逆变器 Isuna S3K-SL-S~S6K-SL-S

本指南适用于安装过程的指导说明
请在安装前详细阅读用户手册


安装工具




冲击钻：墙面打孔

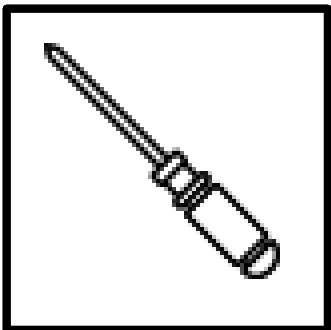


M6十字螺丝刀：拆卸、安装螺丝和接线

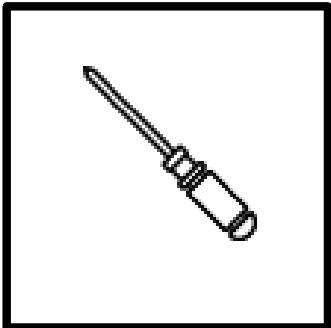


M4十字螺丝刀：拆卸、安装负载端子螺丝

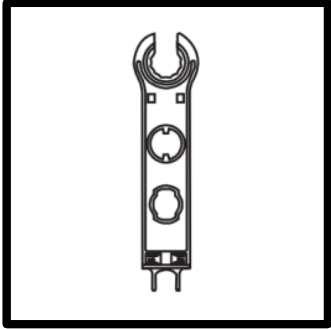


拆卸工具：拆卸PV、BAT线端端子

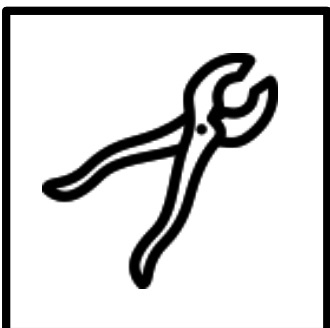


剥线钳：剥线

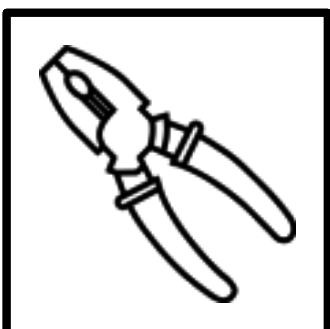

压线钳：压接PV、BAT电缆线

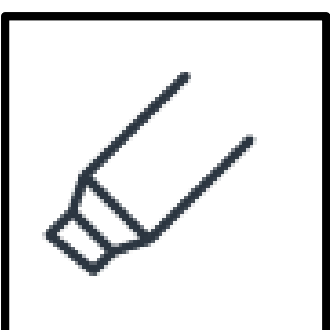


记号笔：打孔记号

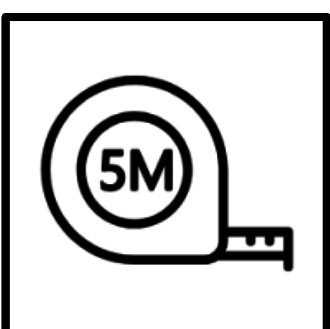


卷尺：测量距离

注：如果与实物出现差异请联系供应商获取电子档


Electrical Connection Diagram

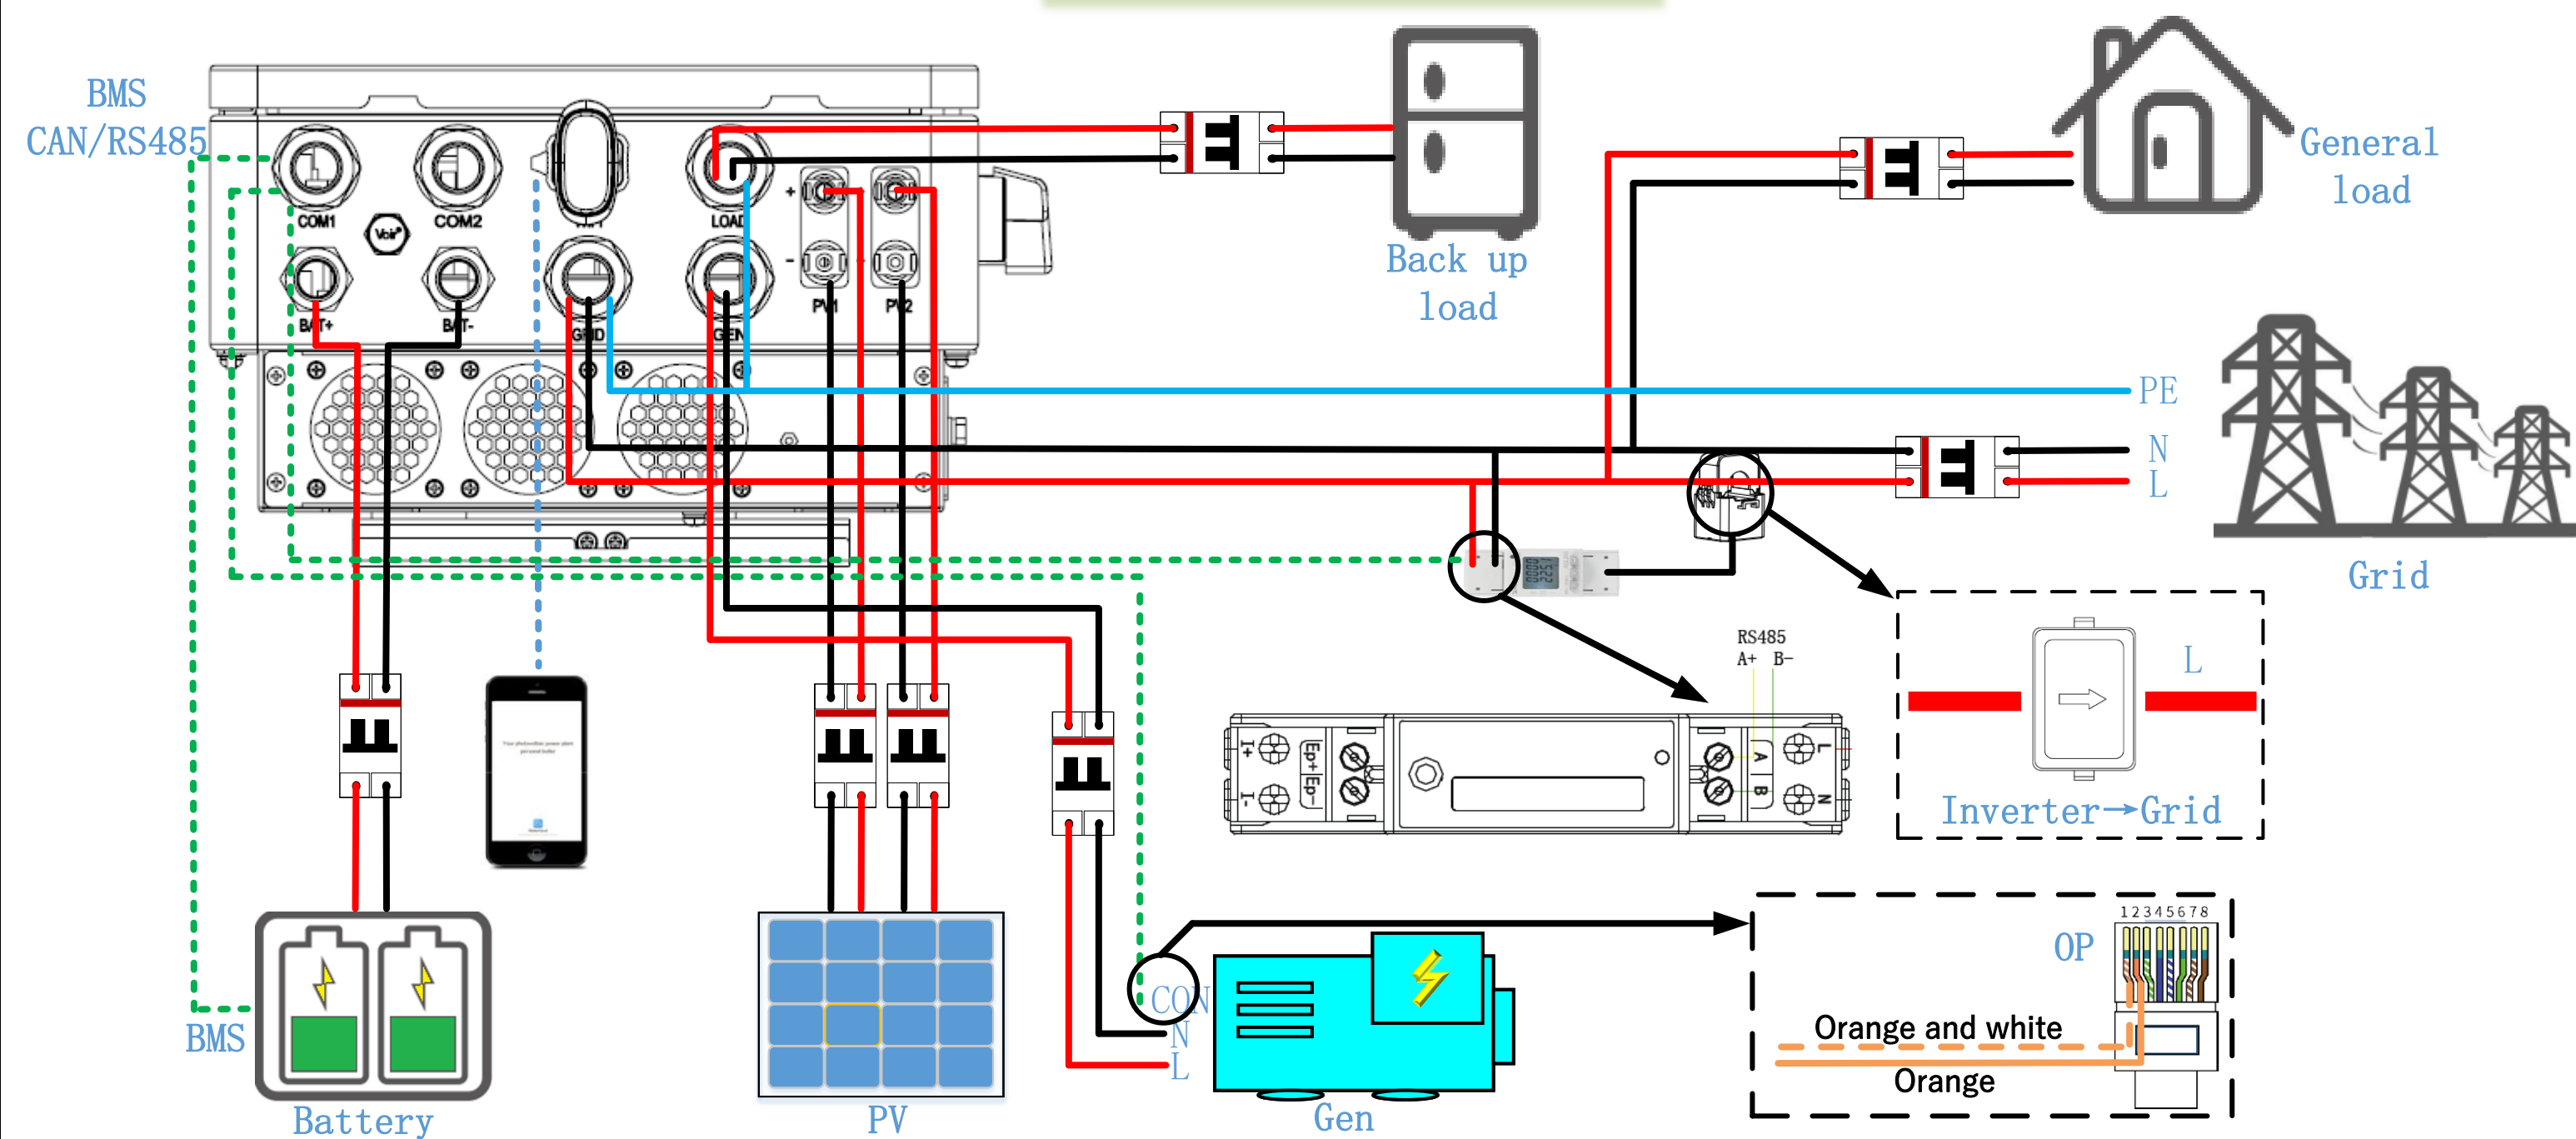


Installation of wall mounts and inverters

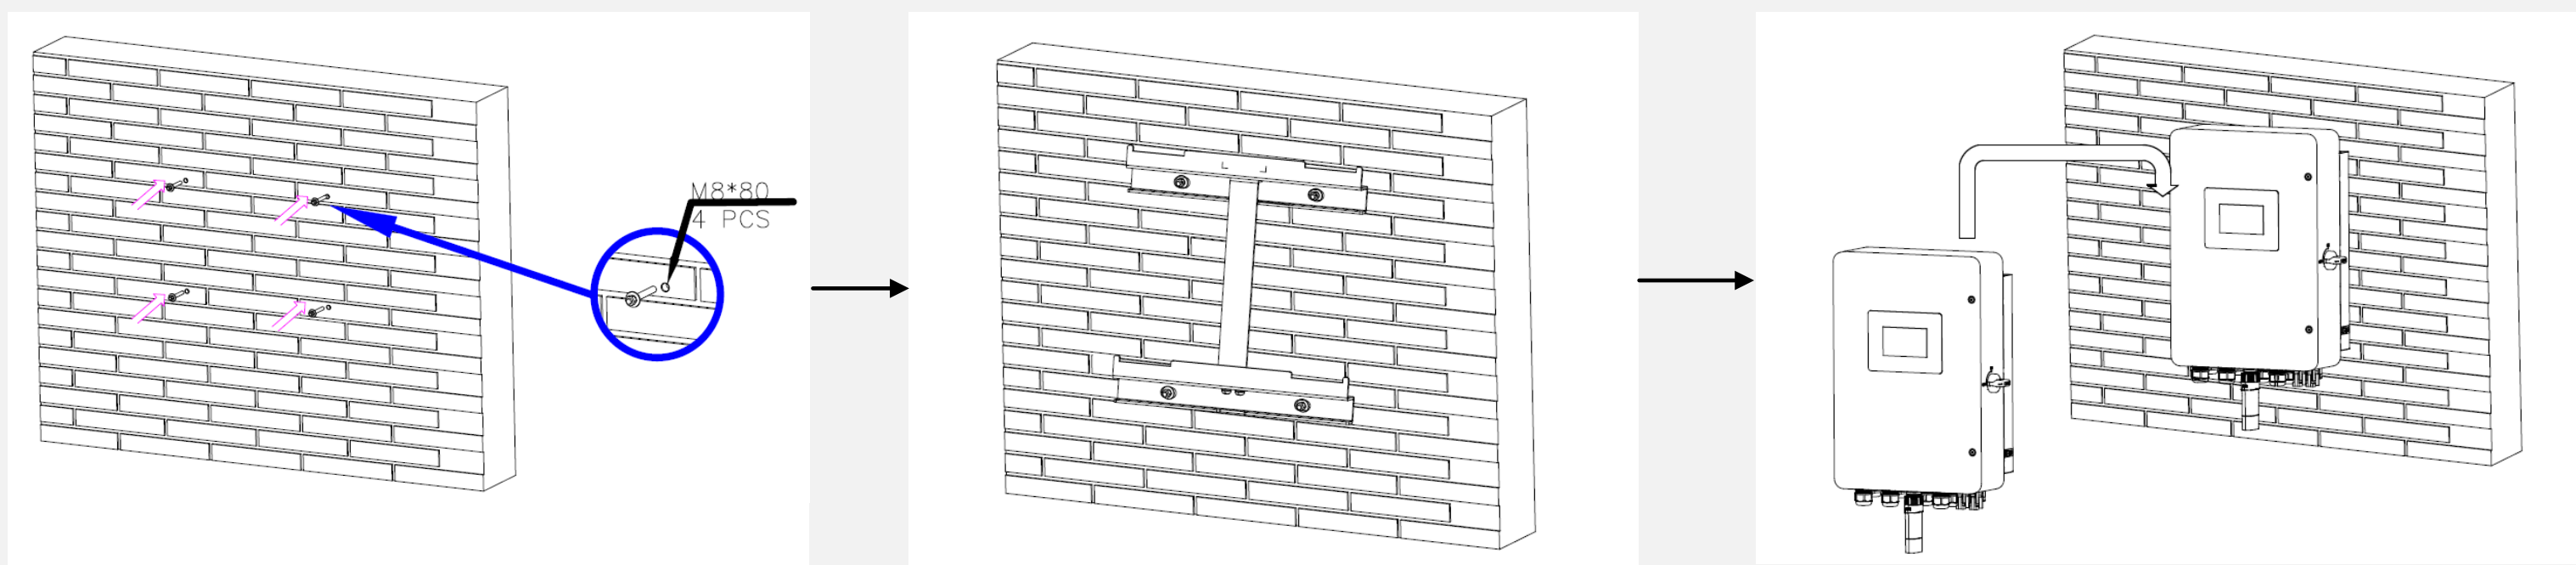


Connecting the battery

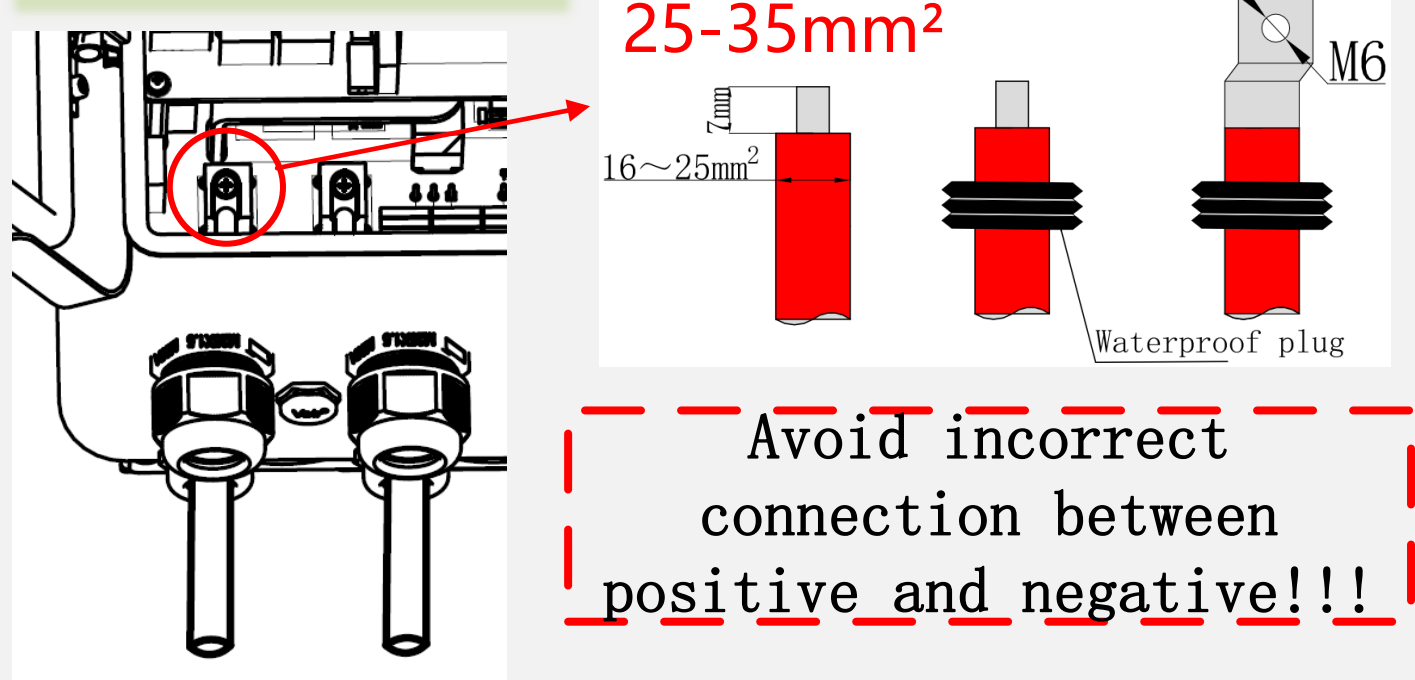


Connecting the AC Terminal

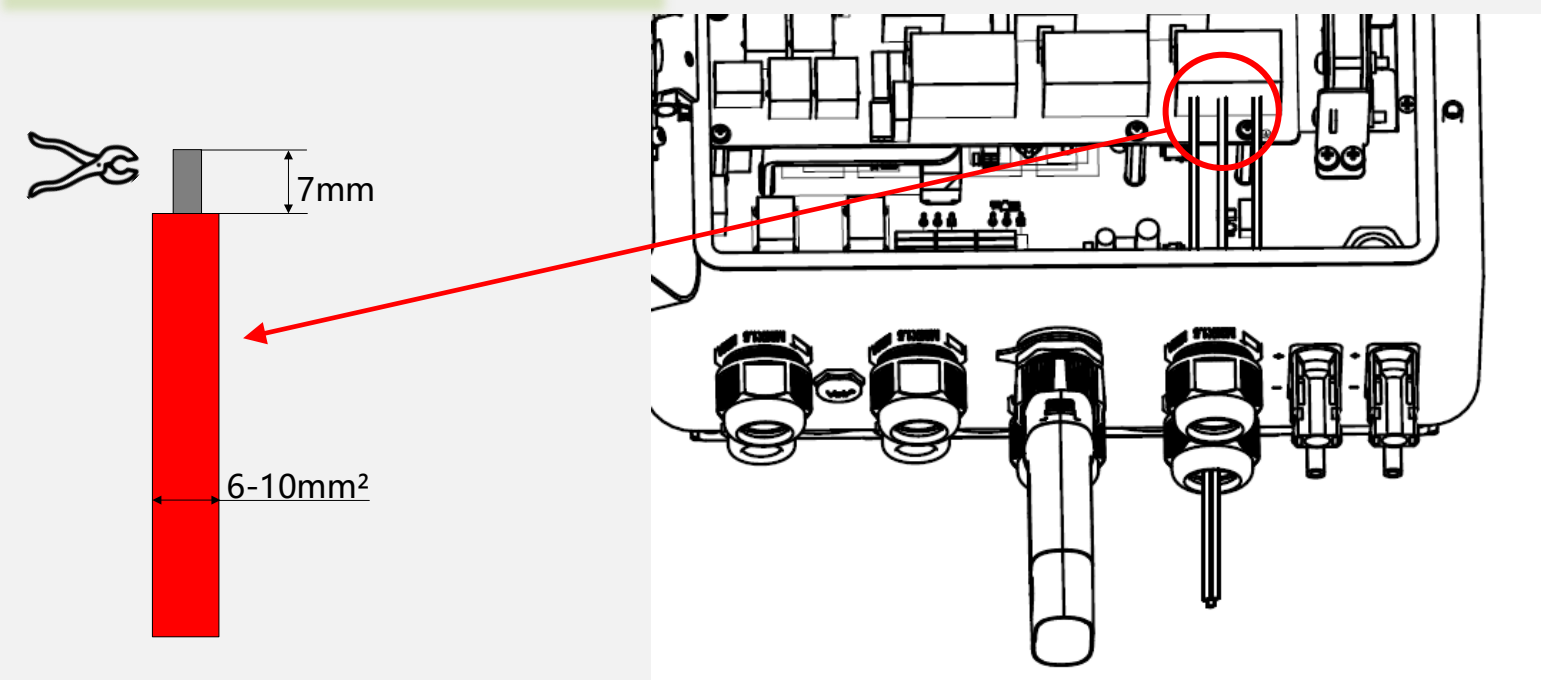


Inverter grounding

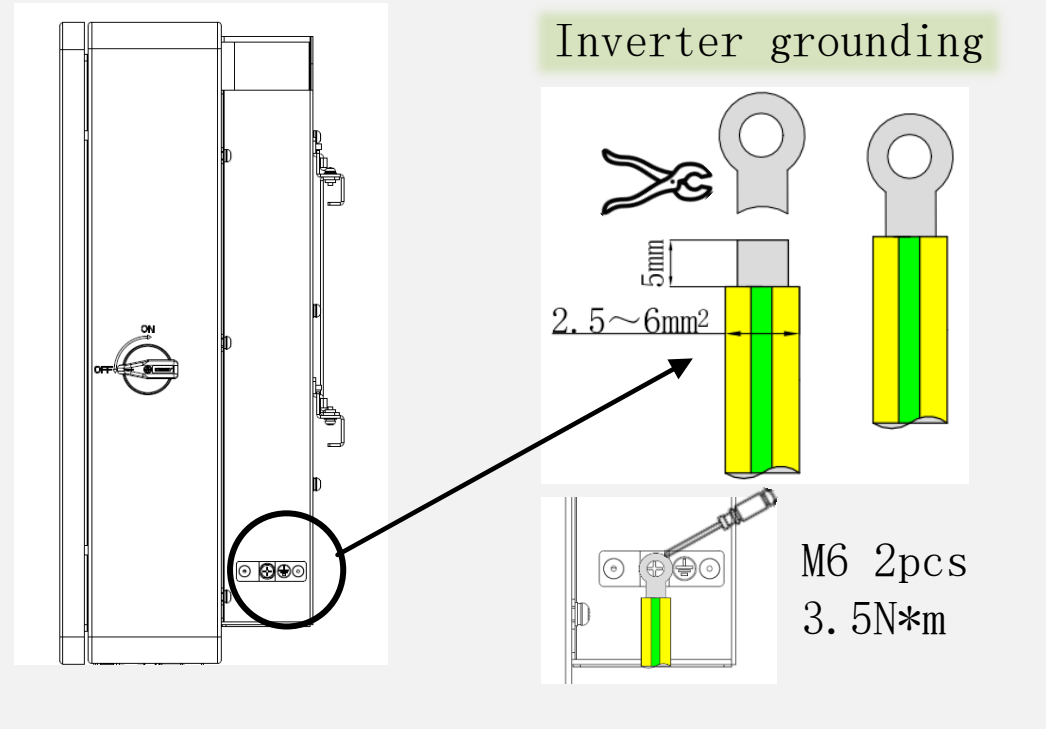

Connecting PV

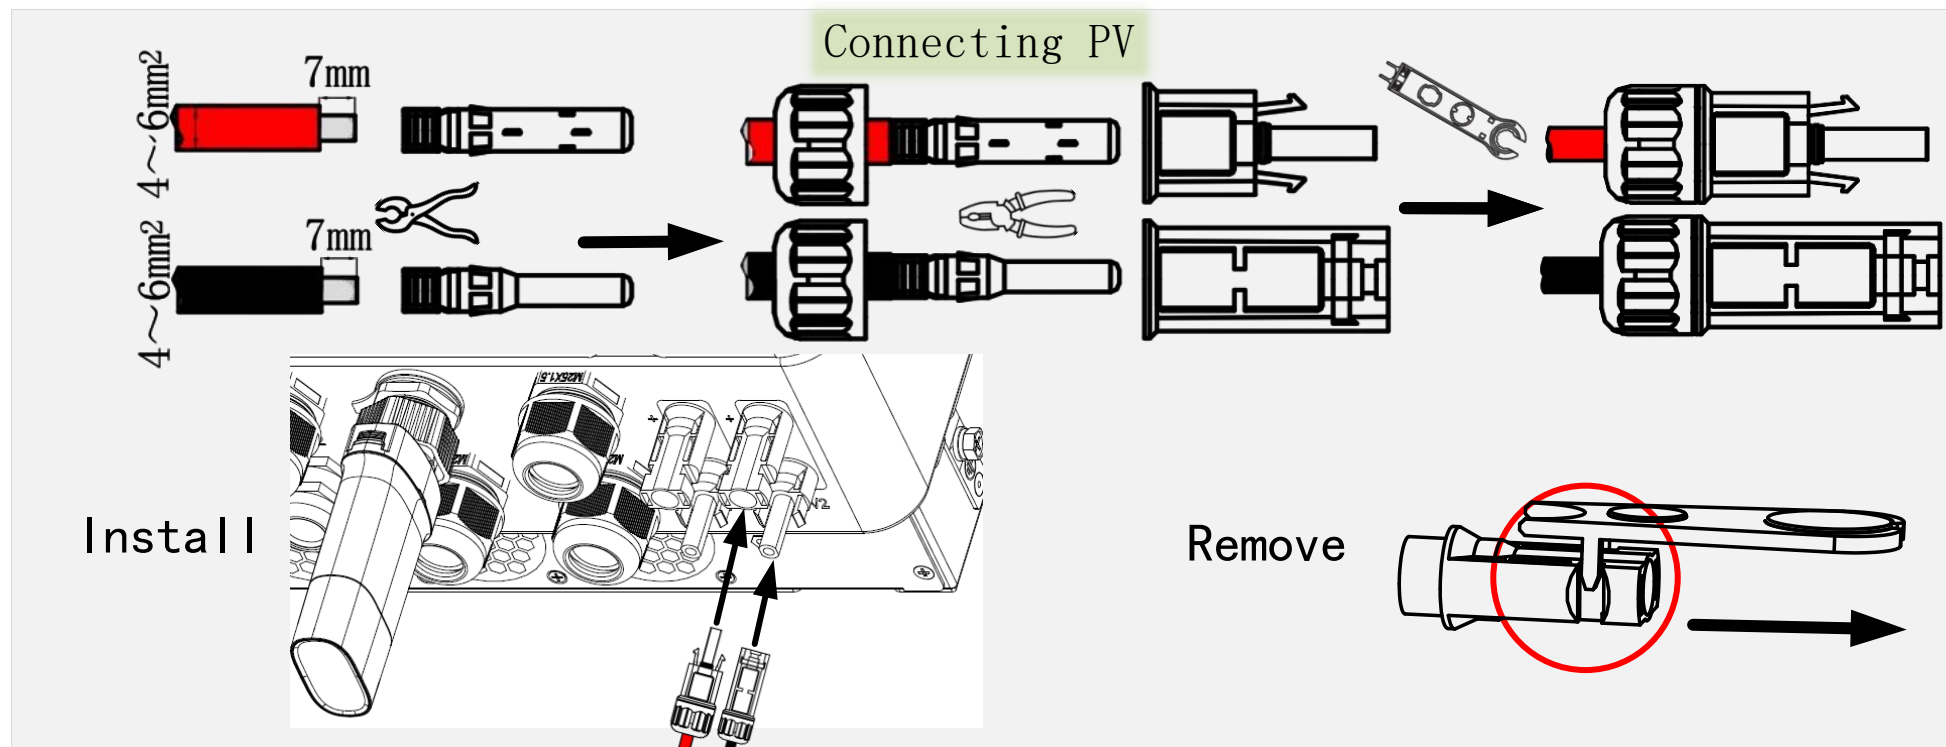

Connecting the WIFI module

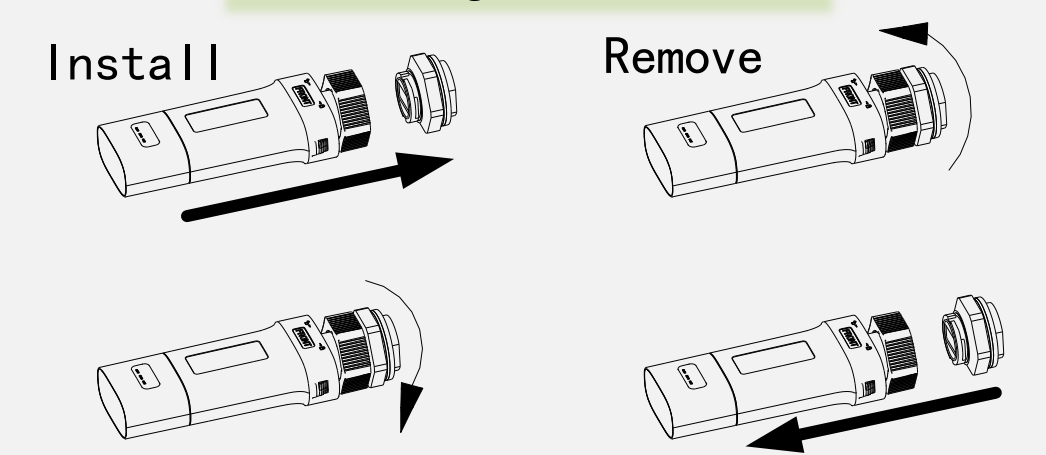

ESS Link Download



Android



Google play



iOS

Download the user manual for details:
www.sinexcel-isuna.com/Download/